



## Instruction Manual Keystone Jack - UTP 22-26 AWG 90°/180° Way Out

- 1 Strip approximately 40 mm of the cable jacket.
- 2 Separate the wire into 4 pairs. Cut off the cross filler by diagonal plier.

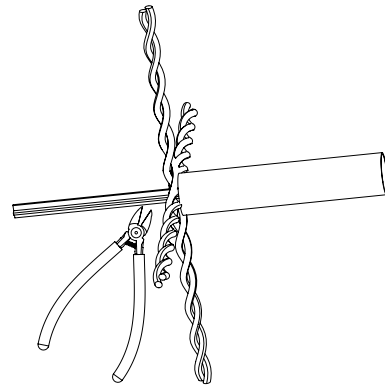


- 3 Insert the wires into the keystone holes according to TIA568A/B wiring instruction label and cutflush.

We recommend that you place the cable by establishing an angle of 90° between this and keystone before you insert the wires into the Keystone holes.

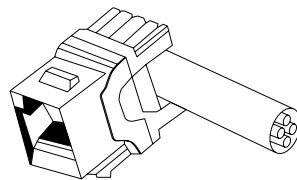


For a better insertion of the wires into the keystone please use a krone/110 IDC tool.

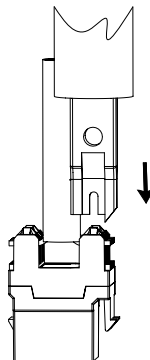

- 4 Take the plastic cap through the solid cable and cover the keystone jack.

The plastic cap can be used for left or right way out.

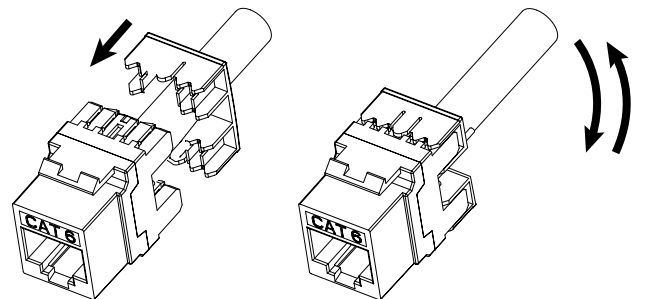

Done! Good Job!

	TIA/EIA T568A	TIA/EIA T568B	
Jack Pin Designations	1	White/Green	White/Orange
	2	Green	Orange
	3	White/Orange	White/Green
	6	Orange	Green
	4	Blue	Blue
	5	White/Blue	White/Blue
	7	White/Brown	White/Brown
	8	Brown	Brown